

# XBOX HI DEF SETUP

Promods.co.nz


In order to use this feature you must have **Promods V3 HD software**, a component AV cable for your Xbox and also have a High Definition TV.

Let's get started!

1. Connect Component AV Cable to Xbox and HDTV using the component video inputs on your TV (Red, Green and Blue).
2. Turn TV and Xbox on.
3. Select Component input on your TV.
4. Select "Settings" on Xbox as shown.



4. Scroll to the "Configuration" tab and then across to "PAL / NTSC Switching".

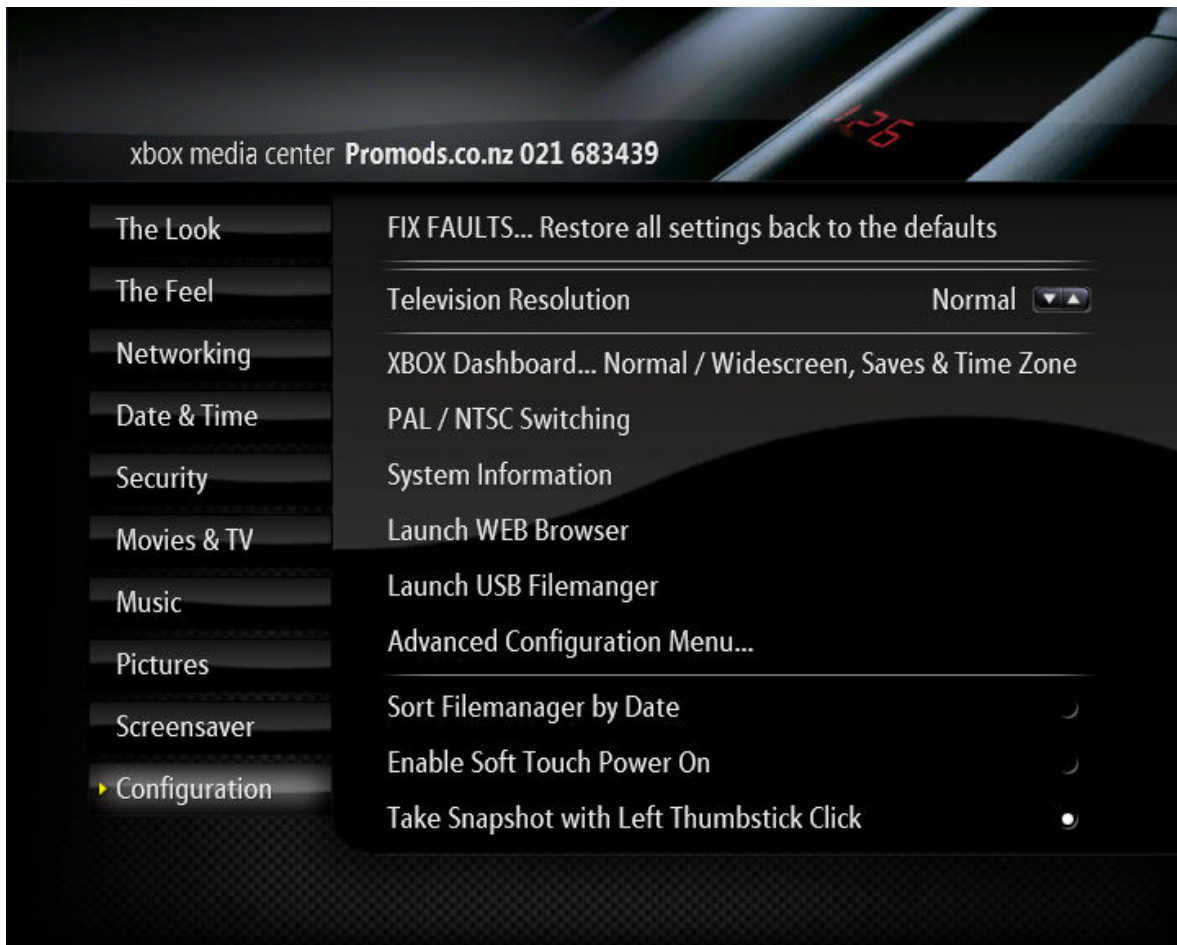

5. Select "PAL / NTSC Switching" push "B" on gamepad (or "Back" button if using Remote) for NTSC then restart your Xbox.

*We want to change the format to NTSC because this is the format Hi Def is displayed in.*

6. You now have to go back to "Settings" then "Configuration".
7. Go across and select "XBOX Dashboard... Normal / Widescreen, Saves & Time Zone". This is the original Microsoft dash.
8. Select "Settings" then "Video".
9. Select "Video Mode" and set it to "Wide Screen", then select "720p".

**Note:** *720p is the best format to use.*

10. Now select the "B" button (or "Back" button if using Remote) twice to get back to the main page of the original dash.
11. Now restart your Xbox and enjoy the crystal clear quality of hi def!