

Reset the Xbox Hold **both triggers** on the back of the controller and at the same time press **BACK** and **BLACK**. Pressing all these four at once resets your Xbox.

General Keys These are the general keys to working your way around the Xbox.

A	select on remote	Select the item or move into the folder
B	back on remote	Go back one folder (stop media playing if in a fullscreen mode or at home)
BACK	menu on remote	Return back to home menu or step back to it, if pressed enough you will return to the home menu
START	0 on remote	Player controls for media (pause, play, skip, visual options, video options etc depending on what media is playing and how it is being viewed EG in full screen Music you can change your Visualisation here)
RIGHT THUMBSTICK click	9 on remote	Access the Shutdown Menu, Settings or Filemanager (Weather and detected Xbox if available)
LEFT THUMBSTICK click		Access the Filemanager
RIGHT THUMBSTICK UP / DOWN	1 Vol Up, 7 Vol Down on remote	Change your volume up/down
RIGHT THUMBSTICK LEFT / RIGHT		Slide the place where you are currently playing your media from
LEFT / RIGHT TRIGGERS		Fast-forward / rewind media that is playing depending on how far you pressed the triggers in
X	display on remote	Switch between full screen and current window
WHITE	4 on remote	Extra options when you are on a file or folder
Y	select on remote	In full screen video this will change the aspect ratio (Normal, Zoomed, Stretched, 16x9, 4x3....)

Backup Discs Insert your Game, wait a few seconds for the disc to spin up and a **'Backup Disc'** button will appear on the home screen. Press this button to backup your Game/DVD/Audio disc.

Play your Disc Insert your Game / DVD / Audio CD / SVCD / VCD , then press the **'Play Disc'** button that appears on the home screen.

Fix Faults This allows you to return all your settings back to original. This is found in the **Settings** section. This also allows you to snapshot your own settings so you can return to them later if you wish. It also allows you to switch to large easy to read thumbnails or normal sized thumbnails. Note this will not delete any Games/Movies/Music etc, it will only reset the settings back to defaults.

Extra Menu This menu is located at the **bottom of the home page** and looks like an **upward arrow** or by using the **RIGHT THUMBSTICK click** on any window. It has the **Advanced Shutdown Menu, Settings, Filemanager, Weather** if networked and **Autodetected Xbox** if one is detected on the network. It allows you to shut the Xbox down, reboot the Xbox, set it to turn off in 15mins / 30mins / 60mins / 2Hours / 4Hours / 8Hours or cancel the shutdown timer.

Settings

This menu is located at the **bottom of the home page** and looks like an **upward arrow** or by using the **RIGHT THUMBSTICK** click on any window. This opens the **Extra Menu** where you can find **Settings**. This allows you to setup your passwords, network, audio settings and nearly everything else you can think of. You can also return to the **Dashboard** to change the **TIME**, remove **SAVED GAMES** and set it to **NORMAL** or **WIDESCREEN**. You can also run **FIX FAULTS** which will return all settings back to defaults.

Filemanager

This option appears in the **RIGHT THUMBSTICK** click menu or off the **Extra Menu** or by clicking the **LEFT THUMBSTICK** click. This allows you to Delete, Copy, Move, Rename files or folders around your Xbox or across a networked PC, or another detected Xbox.

Y	info on remote	Highlights a file / folder
WHITE	title on remote	Shows you the options you have to Delete, Copy, Move, Rename etc

Weather

This option appears in the **RIGHT THUMBSTICK** click menu or off the **Extra Menu** and will give you a full weather report if the internet is connected to your Xbox. If there is no network you won't see this option.

Autodetected Xbox

This option appears in the **RIGHT THUMBSTICK** click menu or off **Extra Menu** and appears if another Xbox is detected so you can copy or stream files from the other Xbox. The Xbox can auto-detect another Xbox to copy files between each other. Go to www.promods.co.nz and download the 'Xbox to Xbox Networking Guide' tutorial for full details on how to set this up.

Security

A secure folder called Secure Media can be loaded up from the MOVIES / TV SHOWS sections. You will need to go back one folder and click on Secure Media and then enter the password. By default it is **XXX** this can be changed in the **Settings / Networking, Media Streaming & Security / Security** section along with locking any media section, startup, **Filemanager** or **Settings** from being accessed without the password. **Please note!!!** if you have locked the startup or settings and you have forgotten your password it can't be fixed without help. If you have forgotten your password and cant remember it **FIX FAULTS** would reset this back to **XXX**.

Ripping CDs

In the MUSIC section the **Rip Audio CD** button will be selectable if an audio CD is inserted. Select this and when asked enter the name you wish the folder to be named, this will be rip the CD with the name you selected into the MUSIC section.

Media Playlists

In the MUSIC / MOVIES / TV SHOWS sections the **Playlists** button will allow you to load your **saved** playlists.

Y	info on remote	Queue a folder or song / movie to the playlist manager(this will also remove the queued song / movie if pressed in the playlist manager)
BLACK	title on remote	Switches you to the playlist manager so you can SAVE or change settings for your queued media (pressing BLACK / title on remote again will return you back to your MUSIC / MOVIES or TV SHOWS section). If you wish to make a new playlist make sure to clear all present queued songs from the playlist manager window.

Arcade Games

Game Selection

Choosing an arcade game to play.

A	Launch the chosen game
WHITE	Add / remove game from your favourites (Favourite games appear as a gold colour)
BLACK	Switch between showing all games and your favourite games
BACK	Switch the way your games are sorted (Name, Times played, Type, Year)
Y	If held down it will allow fast jumping to your selected game (if viewed by name it will jump up / down a letter with an up / down press, if viewed by year it will jump one year with an up / down press.....)

In Game Keys

Options while playing an arcade game.

Dpad or Left Thumbstick	Controls direction of movement
A	Primary button (Normally fire)
B	Secondary button (Normally jump. Other buttons maybe used depending on the game)
START + BACK	Jump back to the Game Selection interface
BACK + BLACK	Pause the game
BACK + WHITE	Extra game options like cheats

Frequently Asked Questions

1	My volume is low for Movies and Music?	Move the RIGHT THUMBSTICK up to adjust the volume up, or press and hold 1 on the remote control to turn the volume up.
2	Why don't my backup CD / DVD's work?	The Xbox DVD-ROM sometimes does not read copied discs. Try using different brands of CD-R or DVD-R discs, some Xbox DVD-ROMS will not read any copied discs, only originals.
3	I've changed so many settings I'm lost, what do I do?	Run FIX FAULTS , to do this go to SETTINGS / FIX FAULTS . Click the top menu option, FIX FAULTS and choose yes. Reboot the Xbox. This can't be done with the remote.
4	I forgot my Xbox password	Click on SETTINGS / FIX FAULTS and run FIX FAULTS , this resets your password back to the default XXX . If you have locked the settings menu or the startup then you need to return your Xbox to be reset.
5	How do I change the Date and Time?	Click on SETTINGS / Dashboard then go into Settings / Clock and adjust your date and time.
6	How do I make the Xbox Widescreen or Normal Screen (4x3)?	Click on SETTINGS / Dashboard then go into Settings / Video and select Wide Screen or Normal Screen.
7	How do I add subtitles to my Movies?	Add the subtitle file as Sample.sub if the Movie name is Sample.avi. This will give you your Subtitles.
8	It's too flashy can I tone it down?	Yes! go into SETTINGS and disable Animations and or Visuals this will remove the movement or the visuals in the background. Click on the button to Enable / Disable the feature.

9	How do I change my music visuals	Click on SETTINGS / MUSIC and the top option is to change the visuals (V2 Milkdrop is psychedelic). In full screen music mode the START button will bring up the OSD this allows you to change your visual while watching what each visual looks like.
10	How do I stack a Movie?	Name movies like this Sample-CD1.avi, Sample-CD2.avi, Sample-CD3.avi...the movie will then appear as Sample and will play through as if it was one file.
11	How do I make a folder look like a picture on my Xbox?	Place a picture into the folder called Folder.jpg This will make V2 display the folder as that picture instead of the default Folder Icon.
12	How do I choose my own backgrounds? WARNING!!! - PLEASE RESIZE PICTURES BEFORE PUTTING PICTURES ON THE XBOX. RESIZE BACKGROUNDS TO A RESOLUTION BELOW 1280x1024 SO YOU DON'T GET SLOW DOWN OR BLANK PICTURES DISPLAYING	This menu is located at the bottom of the home page and looks like an eye. You can choose a set THEME or your own SLIDESHOW folder for backgrounds, or just a picture as the BACKGROUND . You can also select Stretch to Fit to make the image zoom and fit into the space or just stretch them and not worry about the shape. Note if you select a theme like V2 Honda the Honda logo will show even if you select your own backgrounds. To change the logo the theme must be changed.
13	My chosen backgrounds are sometimes blank?	The chosen background is too large for V2, it must be below 1280x1024 pixels to display the picture. Resize the pictures on your PC and try again.
14	How do I turn on cheats for a game?	Go into Games, press the WHITE button on the game and select Turn Trainers On & Off then select the cheat you want. Then press back to go back into Games. The selected game should then have a Nuke Symbol on it and any time the game is run it will run with these cheats. To turn them off go into Turn Trainers On & Off and turn them all off. Note not all games have cheats supported.
15	How do I add Media to my Xbox from my PC?	You need to download the 'Xbox to PC Networking Guide' from www.promods.co.nz . On your Xbox go into Settings / Networking, Media Streaming & Security / Xbox Network to change the XBOX IP address .
16	How do I get Weather News and internet lookups to work?	Go into Settings / Networking, Media Streaming & Security / Xbox Network and change the IP of the Router / PC that connects to the Internet . This is the IP of your router, or the IP of your PC that has the internet shared. You must enable Internet Connection Sharing on your PC for this to work. Also at times the DNS Server needs to be setup. If unsure make it the same IP as above.
17	How do I stream Media off my PC?	Go into Settings / Networking, Media Streaming & Security / STREAM from PC and Change the IP of Networked PC that media streams from to that of your Networked PC with the Media on it. Then you must click APPLY Changes Now . Then you must share some folders on your PC, by right clicking on a folder and selecting properties then selecting the sharing Tab. You can now access your Networked TV Shows, Movies, Music and Pictures by going into the home page and going to the media button. It will glow Green . Pressing right on this will make the button glow Blue , if you click A on this now it will look for Media off the PC, not the Xbox.